


REPLACEABLE SLOT INSERT SYSTEM

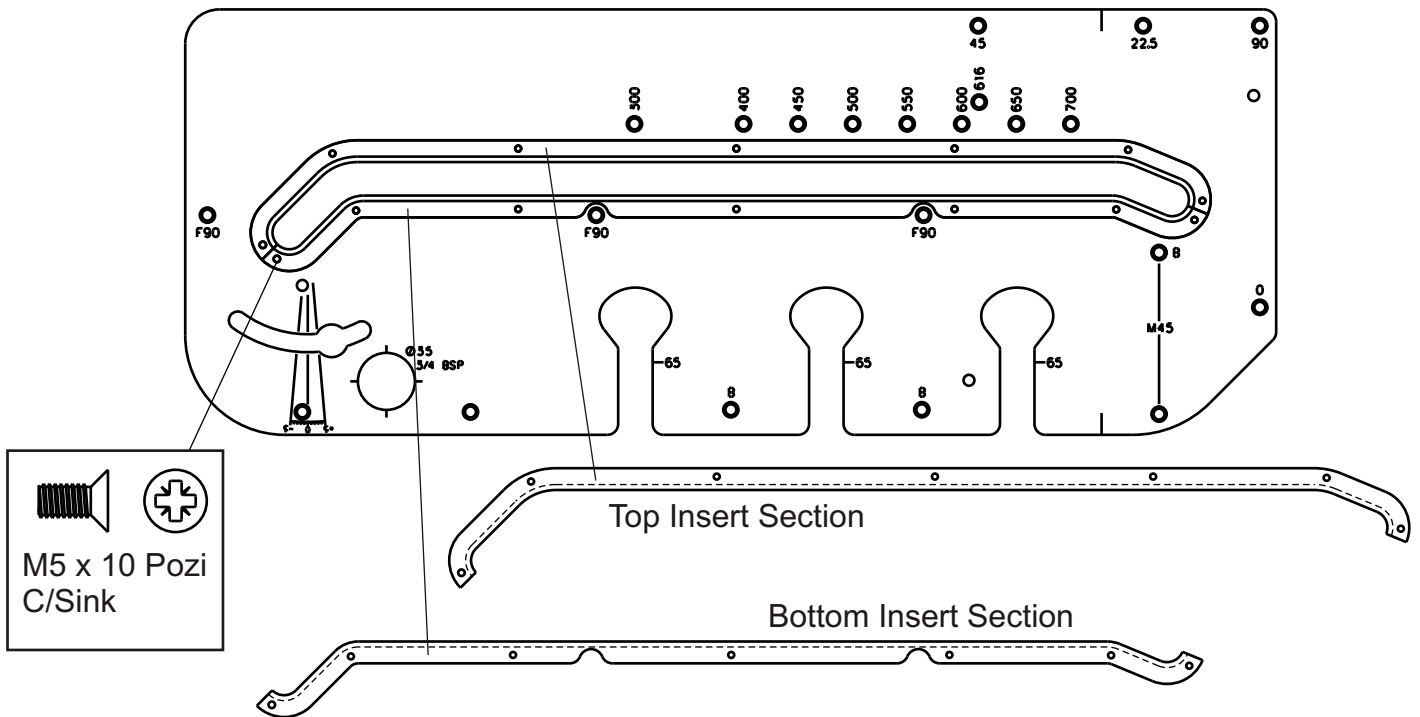

1. The central slot consists of a replaceable insert which is split into a top and bottom section. Either or both sections can be replaced independently if they are damaged.
2. Remove the screws from the damaged insert. Do not discard the screws as these are used for the replaced insert.
3. Remove the damaged insert section from the jig.
4. Remove the new insert section from the packaging.
5. Make sure the new insert section, and the worktop jig is clean before assembling.
6. Screw the insert section into the jig in the sequence shown below and do not over tighten the screws - this will ensure that the geometry of the insert will not distort.

