


INSTRUCTIONS FOR 700MM WOOD WORKTOP JIG

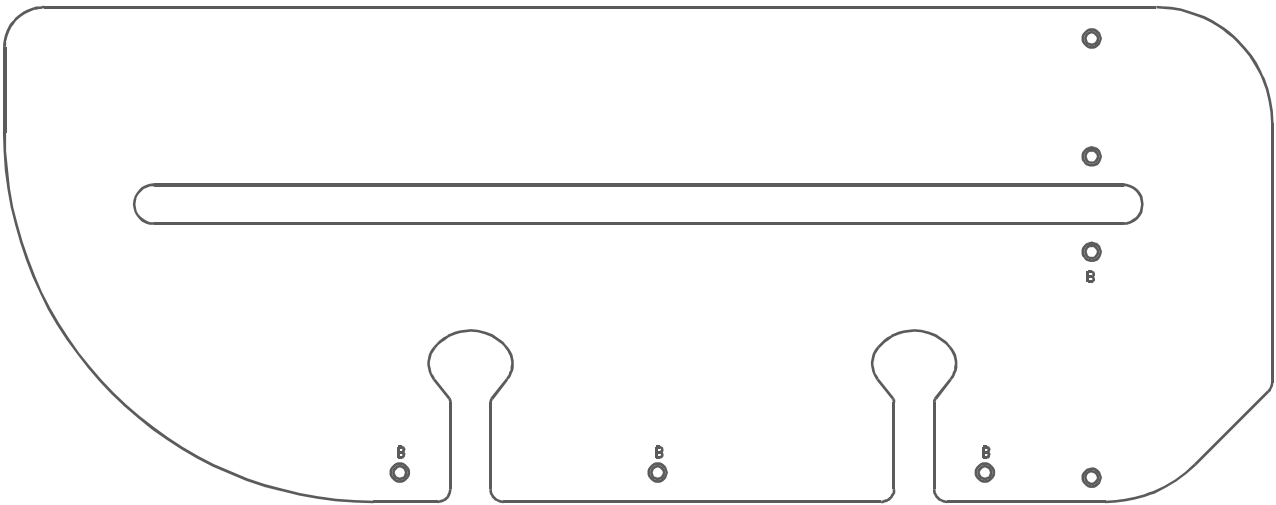


Please read these following points carefully before cutting:


1. Before using the jig we recommend you practice a few joints with off-cuts of worktops or other materials to familiarize yourself with the jig.
2. Other equipment required to use this jig:
 - Hand router with 12.7mm (1/2") collet capacity
 - A 30mm guide bush
 - Good quality tungsten carbide cutter 12.7mm x 50mm (1/2" x 2")
 - One pair of G-clamps
3. Safety First:
 - Always wear protective goggles when cutting.
 - Make the path of the router clear of any obstacles
 - Make sure the cable of the router is clear of the jig.
 - The jig should be properly clamped to the worktop and supported properly on a bench or trestle.
4. When cutting:
 - Always work from left to right with no cuts deeper than 10 –12mm.
 - Never withdraw the router from the jig whilst the cutter is in motion.

TYPES OF JOINTS


LEFT HAND 90° JOINT

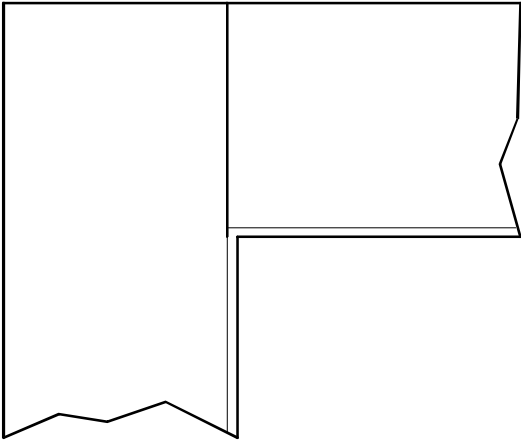

RIGHT HAND 90° JOINT


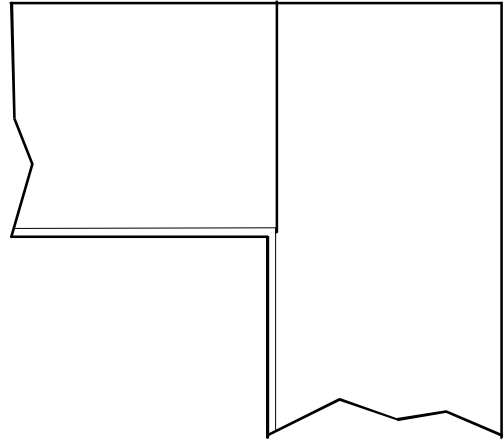


PENINSULAR JOINT

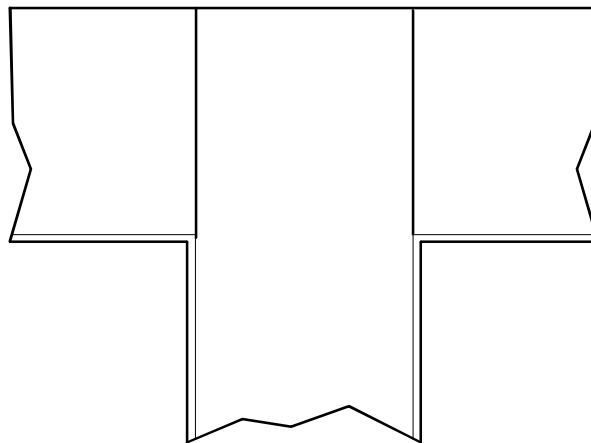

CUTTING TO SIZE

90° JOINTS

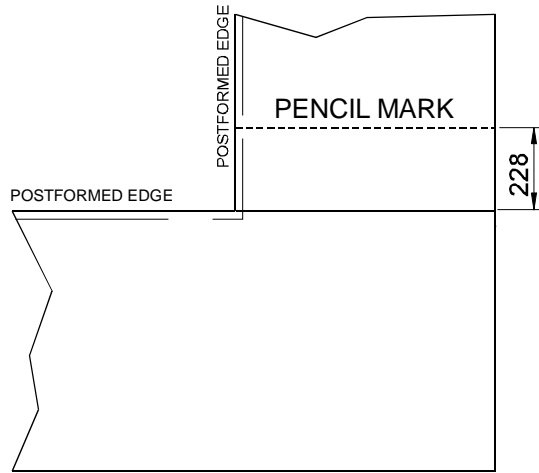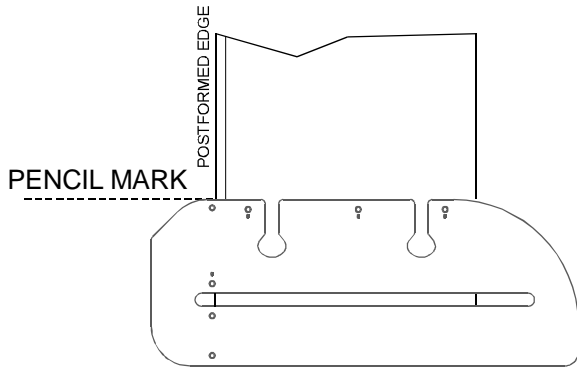

EXTRA FEATURES

WITH THIS JIG YOU ARE ABLE
TO CUT THE BELOW RADIUSSES

